

 800-654-3500 • ANVER.COM	OPERATING INSTRUCTIONS FOR 360 DEGREE CW/CCW VERTICAL/HORIZONTAL POWER ROTATOR WITH POWER TILT VACUUM LIFTER	Page 1 of 1	
		Document No.	13000292
		Revision	A
		Created By	WJ/VXP
		Effective Date:	MAY. 2012

OPERATOR INSTRUCTION

- **Read all Operation Manual** and all safety warnings before operating rotator lifter.
- Turn power on. Switch should light up and vacuum pump will turn on.
- Ensure all locking knobs and, or pins are in place and secure.
- Adjust position until pads are in close proximity to the load centered on load.
- Facing the operator box, slide Control Valve to “**ATTACH**” position.
- Center Vacuum pads on the load (refer to manual for off-center loads).
- Bring vacuum pad to load.
- Wait until vacuum gauge reaches safe vacuum level, or green field.
- Lift load a few inches, **STOP** and **CHECK** for Safe/Stable vacuum, then proceed, while observing all safety rules.
- If vacuum level drops, put the load down, the lifter is unsafe to use.
- If vacuum level is safe and stable, lift load to allow clearance when load is rotated.
- Use pendant rotate/tilt switch to position load. Only one switch will work at a time.
- At the end of lift, put load down (There should be no slack in hook and lifter bale) and slide the Control Valve to the “**RELEASE**” position.
- Make sure vacuum has completely release and move lifter away from the load.
- When finished with lifter, turn power off.

13000292