Replace worn or damaged parts with Gold Ring™ Spare Parts Kit. Use all parts for best results.

d. Inspect valve body seat for scratches, nicks, dents or other blemishes. Replace if damaged.

e. Reassemble in reverse order of disassembly, paying careful attention to exploded views provided. Apply 175 ± 25 inch pounds of torquewhen tightening the plunger tube assembly on the 1/4", 3/8", 1/2", and 3/4" NPT models. The 1/8" requires 90+ 10 inch pounds of torque. The 1/2" and 3/4" NPT require 110+ 10 inch pounds of torque to the cover screw in a crisscross pattern. Lubricate all gaskets with Dow Corning ® DC 200 OIL or an equivalent light machine oil

f. DO NOT alter, modify, or use parts not obtained in Spare Parts Kit from original manufacturer.

Parker Gold Ring ™ Spare Parts Kits

Spare Parts Kits and Unit Solenoids are available for Gold Ring™ Valves. Parts marked with an asterisk (*) are included in Spare Parts Kits (See Exploded Views).

Ordering Information For Spare Parts Kits

When ordering Parker Gold Ring™ Spare Parts Kits or Unit Solenoids, specify Valve Catalog Number, Serial Number and Voltage.

Note This product may contain chemicals known to the state of California to cause cancer, birth defects or other reproductive harm.
This warning is given in compliance with California Proposition 65 as detectable amounts of chemicals subject to Proposition 65 may be contained in this product

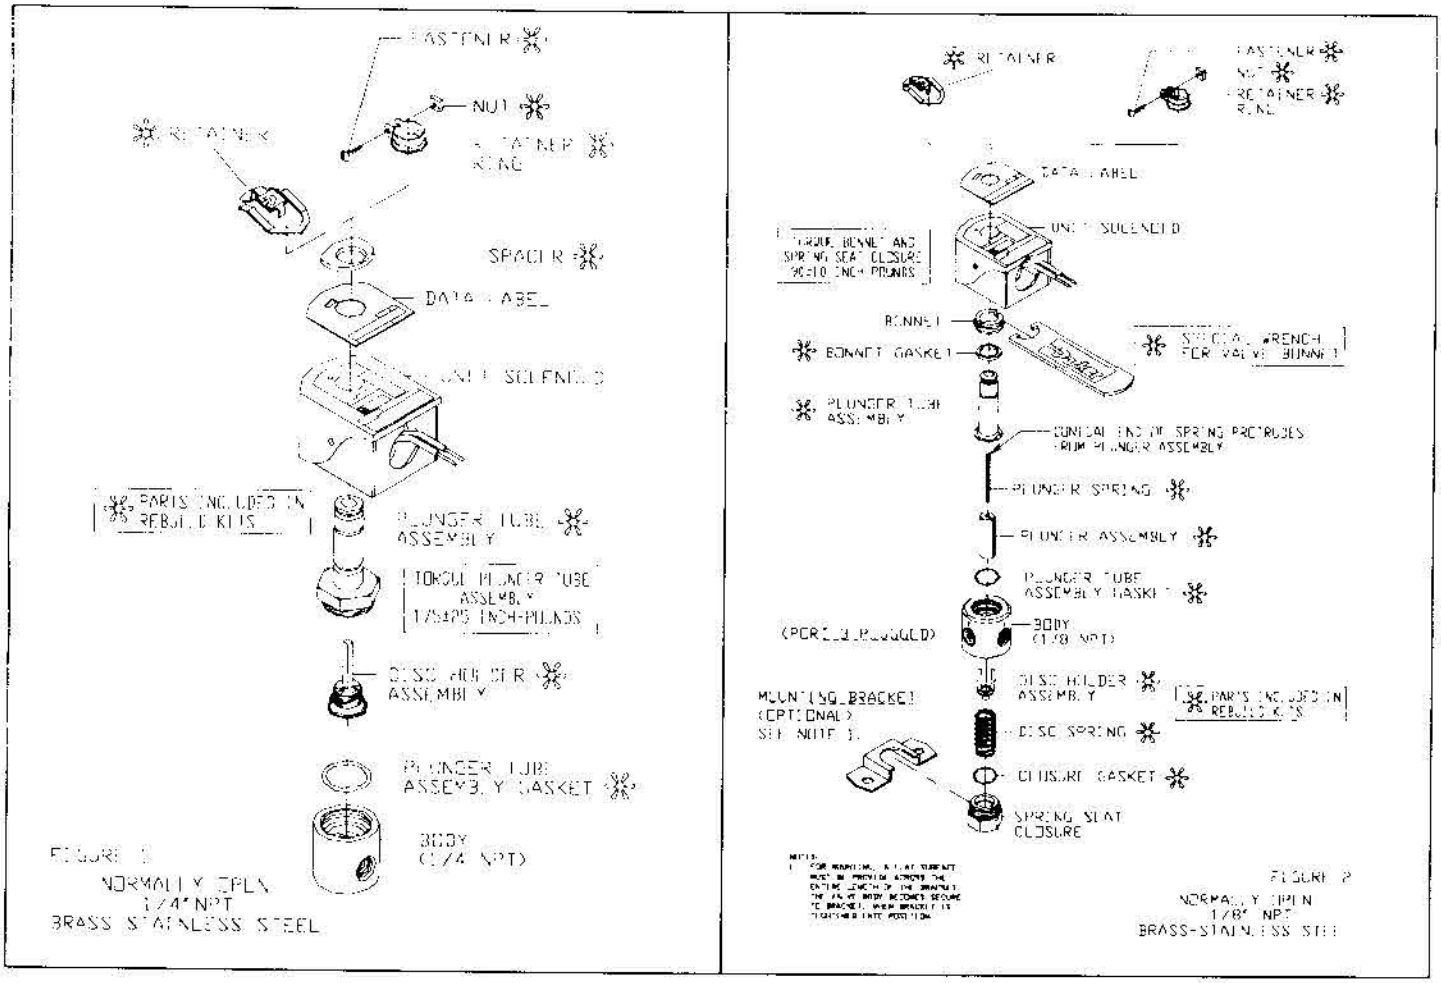

Parker Hannifin Corporation
147 W. Hoy Road
Madison, MS 39110
(601) 856-4123